

■ Installation

Set the left-side crank arm in place, and then tighten the crank arm fixing bolt. Next, turn the adjusting nut to adjust the play, and then tighten the adjusting nut set bolt. After this, use the TL-FC35 to tighten the crank arm cap.

Note: The crank arm cap and the TL-FC35 screw have a left-hand thread (reverse thread). This is to prevent the crank arm from turning also when removing the crank arm fixing bolt.

Crank arm fixing bolt tightening torque:
34.3 - 49 N·m {298 - 425 in. lbs.}

